

















## Main Product 产品名称大全

No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
1	玻璃升降器总开关	Power Window Switch		2	胎压传感器	Tire Pressure Sensor	
3	气囊游丝	Airbag Spring		4	倒车雷达	Parking Sensor	
5	倒车摄像头	Reversing Camera					

## Auto Switch (开关系统)

No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
6	后视镜开关	Rearview Mirror Switch		7	玻璃升降器单开关	Glass Lift Single Switch	
8	大灯开关	Headlight Switch		9	座椅开关	Seat switch	
10	尾盖开关	Tailgate switch		11	方向盘开关	Steering Wheel Switch	
12	巡航开关	Cruise Control Switch		13	手刹开关	Handbrake Switch	
14	空调AC开关	A/C Switch		15	雾灯开关	Fog Cargo Lamp Control Switch	
16	一键启动开关	Start Switch		17	驱动开关	Driving Switch	
18	玻璃升降器开关面板	Master Window Switch Bezel Panel		19	危险信号灯开关	Hazard Warning Switch	
20	分动箱开关	Transfer Case Switch		21	波箱档位开关	Neutral Safety Switch	
22	车门灯开关	Door Light Lamp Switch		23	转向灯开关	Turn Signal Switch	
24	防侧滑开关	Anti-sideslip switch		25	雨刮开关	Wiper Switch	
26	机盖开关	Cover switch		27	油箱盖开关	Fuel tank cover switch	

28	点火开关	Ignition Switch		29	大灯高度调节开关	Headlight Height Adjustment Control Switch	
30	天窗开关	Sunroof Switch		31	中控锁开关	Door Lock Switch Cental Locking	
32	脚踏开关	Foot Switch					


### Auto Sensor (传感器系统)

No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
33	氧传感器	Oxygen Sensor		34	ABS传感器	ABS Sensor	
35	曲轴位置传感器	Crankshaft Position Sensor		36	凸轮轴位置传感器	Camshaft Position Sensor	
37	空调压力传感器	Air Condition Pressure Sensor		38	燃油压力传感器	Fuel Pressure Sensor	
39	机油压力传感器	Oil Pressure Sensor		40	里程表传感器	Odometer Sensor	
41	爆震传感器	Knock Sensor		42	进气压力传感器	MAP Sensor	
43	加速度传感器	Acceleration Sensor		44	碰撞传感器	Collision Sensor	
45	机油位置传感器	Oil Level Sensor		46	进气温度传感器	Intake Air Temperature Sensor	
47	水温传感器	Water Temperature Sensor		48	排气温度传感器	Exhaust Temperature Sensor	
49	室外温度传感器	Outdoor Temperature Sensor		50	节气门位置传感器	Throttle Position Sensor	
51	空气流量传感器	Air flow sensor		52	高度传感器	Height Sensor	
53	雨量传感器	Rain Sensor		54	压差传感器	Exhaust Differential Pressure Sensor	
55	离合器传感器	Clutch Sensor		56	转向角度传感器	Steering Angle Sensor	

57	水箱液位传感器	Water Tank Level Sensor		58	刹车报警传感器	Brake Alarm Sensor	
59	涡轮增压传感器	Turbocharger Actuator Position Sensor		60	制动力传感器	Brake Force Sensor	
61	光照传感器	Ambient Light Sensor		62	变速箱位置传感器	Gear box Position Sensor	
63	偏航传感器	Yaw Sensor		64	预热塞	Glow Plug	
65	点火线圈	Ignition Coil		66	火花塞	Spark Plug	
67	喷油嘴	Fuel Injector					

### Valve System (阀系统)

No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
68	SCV阀	SCV Valve		69	机油控制阀	Oil Control Valve (VVT)	
70	电磁阀	Solenoid Valve		71	泄压阀	Relief Valve	
72	怠速控制阀 怠速马达	Idle Air Control Valve		73	节气门总成	Throttle Body Assem	
74	涡轮增压阀	Turbocharger Valve		75	EGR阀	EGR Valve	
76	高压油泵 溢流阀	High Pressure Oil Pump Relief Valve		77	尿素喷射阀	Urea Injection Valve	
78	PCV废气阀	Car Exhaust Gas Valve		79	刹车分配阀	Brake Distribution Valve	
80	进气歧管 控制阀	Intake Manifold Control Valve		81	共轨泄压阀	Common Rail Relief Valve	
82	变速箱 电磁阀	Gearbox Solenoid Valve		83	曲轴箱 通风阀	Crankcase Ventilation Valve	
84	燃油泄漏 检测泵	Fuel Leak Detection Pump		85	ABC阀	ABC Valve	

86	暖气控制阀	Heater Control Valve					
----	-------	----------------------	---	--	--	--	--

### Module system (模块系统)

No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
87	大灯模块	Headlight Driver Module		88	倒车雷达模块	Reversing Radar Module	
89	大灯天使眼	LED Control Module		90	燃油泵模块	Fuel Pump Controller Module	
91	盲点模块	Blind Spot Module		92	尾盖控制模块	Tail Cover Control Module	
93	大灯转向模块	Headlamp Steering Module		94	ACC模块	ACC Module	
95	点火模块	Ignition Coil Module		96	防盗模块	Anti-Theft Module	
97	空气悬挂模块	Air Suspension Module		98	门锁天线模块	Door lock antenna module	
99	安全气囊模块	Spring Airbag Module		100	分动箱模块	Transfer Box Module	
101	胎压模块	TPMS Module		102	电压转换模块	Voltage Conversion Module	
103	音响模块	Audio Module		104	玻璃升降器电机模块	Window Switch Motor Module	
105	座椅模块	Seat Module		106	门锁控制模块	Door Lock Control Module	
107	鼓风机电阻	Heater Motor Blower Resistor		108	空调模块	Air Conditioning Module	
109	散热风扇电阻	Radiator Cooling Fan Control Module		110	继电器	Car Relay	

### Lock System (门锁系统)

No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
-----	--------------	--------------	-------	-----	--------------	--------------	-------

111	车门锁块	Door Lock Actuator			112	闭锁器	Liftgate Latch Actuator	
113	行李厢拉手	Trunk Hatch Liftgate			114	点火锁胆	Ignition Lock	
115	尾盖锁机	Rear Tail Gate Latch Lock						
<b>Motor system (电机系统)</b>								
No.	Chinese name	English name	Photo		No.	Chinese name	English name	Photo
116	空调伺服电机	Heater blend door actuator			117	手刹马达电机	Handbrake Motor	
118	燃油压力调节器	Fuel Pressure Regulator			119	时规张紧器	Hydraulic Tensioner Adjuster	
120	油水分离器	Oil and Gas Separator			121	节温器总成	Thermostat Assembly	
122	变速箱步进电机	Transmission Case Step Motor				气门室盖	Valve cover	
<b>Wire harness (线束)</b>								
No.	Chinese name	English name	Photo		No.	Chinese name	English name	Photo
123	气囊游丝线索	Airbag Spring Hairline Clue			124	巡航控制开关线速	Cruise Control Switch Line Speed	
125	倒车雷达插头	PDC Parking Sensor Plug			126	爆震传感器线速	Knock Sensor Wire Harness	
127	电瓶过载保护器	Positive Battery Cable			128	USB接口	Car Interface USB	
129	AUX接口	Car Interface AUX						
<b>Wiper system (雨刮系统)</b>								
No.	Chinese name	English name	Photo		No.	Chinese name	English name	Photo
130	大灯清洗器	Headlamp Washer			131	大灯喷水枪盖	Headlamp Sprinkler Cover	

132	大灯喷水 马达	Headlamp Sprinkler Motor		133	雨刮喷水 马达	Wiper Sprinkler Motor	
<b>Pump system (泵系统)</b>							
No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
134	汽油泵总成	Fuel Pump Assembly		135	座椅打气泵	Seat-lumbar Support	
136	高压油泵	High-Pressure Oil Pump		137	电子水泵	Centrifugal Pump	
138	汽油泵芯	Gasoline Pump Core		139	刹车总泵	Brake Master Cylinder	
140	ABS泵	ABS Pump					
<b>Interior and exterior parts (内外饰件)</b>							
No.	Chinese name	English name	Photo	No.	Chinese name	English name	Photo
141	牌照灯	LED License Plate Lamp		142	叶子板灯	Turn Lamp Light	
143	后杠反光灯	Rear Bumper Reflector Light		144	烟灰缸	Ashtray Ash Box	
145	水杯架	Cup Holder		146	点烟器	Cigarette Socket Lighter	
147	烟灰缸侧盖	Ashtray Bin Side Cover Cap		148	倒车镜灯	Reversing Mirror Lamp	
149	安全带扣头	Seatbelt Buckle		150	室内广告灯	Headliner Lamp Courtesy	
151	电瓶头	Battery Terminal Clamp Clips		152	大灯灯泡	Headlight bulb	
153	O型胶圈	O-Ring		154	喷油嘴胶圈	Fuel Injector-Ring	
155	气门油封	Valve Oil Seal		156	机油盖	Oil Filler Cap	
157	曲轴前油封	Crankshaft Front Oil Seal		158	气门室盖垫	Valve Chamber Cover Gasket	

159	油底壳垫	Oil Gasket		160	曲轴齿	Crankshaft teeth	
161	水箱盖	Radiator Cap		162	机油格座	Oil Filter	
163	碳罐	Fuel Tank Activated Carbon Tank		164	方向机油管	Directional Oil Pipe Booster Pump	
165	倒车雷达胶圈	Parking Sensor O-Ring		166	油压传感器胶圈	Oil Pressure Sensor Ring	
167	变速箱开关圈	Car Steering Column Cap		168	水箱盖总成	Car Coolant Radiator Filler Neck with Cap	
169	波箱插头	Transmission Plug		170	倒车雷达卡扣	Parking Sensor Cover	
171	胎压气门嘴	Tire Pressure Sensor Valve		172	方向盘巡航饰盖	Steering Wheel Cruise Cover	
173	气门嘴螺帽铝垫片	TPMS Tire Valves Cap Gasket		174	气门嘴铝螺帽	Tire Lug Nuts Acorn Rim Extended	
175	气门嘴黑胶圈	TPMS Valve Black Rubber Ring		176	气门芯	Valve Core	
177	气门芯工具	Tire Valve Core Tool		178	排气管尾喉	Exhaust System Tail Pipe	
179	气门嘴螺帽4件套	TPMS Valve Ste Repair Kit		180	下悬挂胶套	Auto Lower Arm Bush Bracket	
181	气门嘴5件套	TPMS Valve Ste Repair Kit		182	车门内拉手	Interior Inside Door Handle	
183	车门外拉手	Exterior Outside Door Handle					