

WHEEL NUT INDICATOR

SAFELY DRIVEN.



It's actually a clear-cut matter: The driver must make sure that the wheels and tires are in safe condition before setting off - this is what is written in the accident prevention regulations "Vehicles".

In a commercial vehicle with several axles, this means an enormous amount of time and effort. With our innovation for the wheel nut indicator we provide a remedy.

Our indicator consists of two parts: the dust cap for the wheel nut and a ring with pointer, which is put on the top and can be turned with fine detents. With the pointer turned to the wheel hub or arrow to arrow, it is thus recognizable at a glance

when the wheel nut has loosened.



Auger No.	91446	83990
Features	indicator removable, yellow	indicator removable, yellow
SW	32	33
Packaging unit	50	50
red black Version	91454 83992	91455 -



Other wheel nut indicators?
Here you'll find our complete range:



*Detailed vehicle information can be found in the vehicle lists under iamauger.com.

Our General Terms and Conditions of Sale, Delivery and Warranty apply. Reference numbers and names, AUGER Autotechnik GmbH excepted, are for comparison purposes only and may not be passed on in invoices. They are non-binding and do not represent any designation of origin.