
 




The control unit is always on alert to receive the signal from the transponder, if the distance is such as not to allow dialogue between transmitter and receiver, activate the lock on the petrol pump and the starter by immobilizing the vehicle. It is a system of maximum security, it always leads to the beginning of its task.

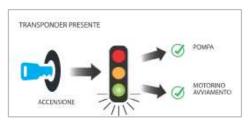




It is simply necessary to remember to take with you the transponder, stored in your wallet, in the case of your mobile phone, in a pocket, NOT with the keys of the car and security is always by your side







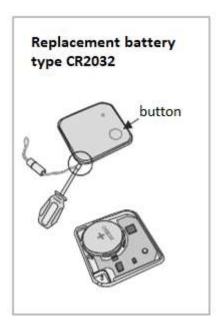

Specifications

- Active transponders with rolling code, frequency 868 MHz
- Dallas emergency electronic key
- Double engine lock
- Automatic system insertion
- Anti-robbery function
- Horn command and hazard controls for flashing direction indicators
- Output for telematic devices (e.g. GPS)
- > 6 inputs available
- > 7 outputs available
- > SATELLITE ACTIVATOR function
- Power supply 12V and 24V