

CPN5

PUMPS



PUMP CPN5

AAZ050-CP5 (MERCEDES)



**AAZ050-CP5 KIT TO FIX ON THE TEST BENCH CPN5 PUMP
- MERCEDES -**

Kit to fix on the test bench new CPN5 pumps consisting of:

- Nr. 4 flexible pipes
- Nr. 1 coupling
- Nr. 1 plate to fix the pump to the test bench
- Nr. 1 flange to fix inlet connection
- Nr. 1 flange to fix outlet connection
- Nr. 2 adaptors for inlet double connection and outlet double connection
- Nr. 2 delivery connections

PUMP CPN5

AAZ050-CP5 (MERCEDES)

For pumps :

Bosch: **CR/CPN5S2/R490/10-8913S**

0.445.020.138	0.445.020.249
0.445.020.189	0.445.020.250
0.445.020.190	0.445.020.271
0.445.020.198	0.445.020.272
0.445.020.199	0.986.437.504
0.445.020.235	0.986.437.507
0.445.020.236	

Applications: **MERCEDES** Actros
OM470 – OM471
4700900050 - A4700900050
4700900750 – A4700900750
4700901550 – A4700901550

PUMP CPN5

AAZ052-CP5 (FIAT)



**AAZ052-CP5 KIT TO FIX ON THE TEST BENCH CPN5
PUMPS - FIAT – IVECO – NEW HOLLAND**

Kit to fix on the test bench new CPN5 pumps consisting of:

Nr. 1 plate to fix the pump to the test bench

Nr. 2 adaptors 16x1,5

Optional: Motoring coupling cone 35mm (AG0035-01)

PUMP CPN5

AAZ052-CP5 (FIAT)

Per pompe:

Bosch: **CR/CPN5S2/L340/30-8913S**

0.445.020.145	0.986.437.511
0.445.020.158	0.986.437.512
0.445.020.160	0.986.437.516
0.445.020.195	
0.445.020.233	
0.445.020.234	
0.445.020.384	

Applicazioni:

FIAT – IVECO – NEW HOLLAND

5801486599 - K5801486599

504388756

580 1486599

3002634C1

04267118

5802805240

AAZ051-CP5

KIT INSERTERS FOR OIL-SEALS ON CPN5



AAZ051-CP5 KIT INSERTERS X OIL-SEALS ON BOSCH CPN5

Kit with 2 inserter to place oil-seals on
Bosch pumps CPN5.
Diam. 58mm and Diam. 60mm.

PUMP CPN5
GASKET KIT



BK0059-CP5 GASKET KIT

Gasket kit with 2 oil-seals for
Bosch pumps model CPN5

BK0063-CP5 CP5 OIL-SEAL

Oil-seal diam. 58mm
X poms CPN5




BK0064-CP5 CP5 OIL-SEAL

Oil-seal diam. 60mm
X poms CPN5

PUMP CPN5

AZ0087-CP5

KIT TO CLEAN VALVE ON CPN5 PUMPS

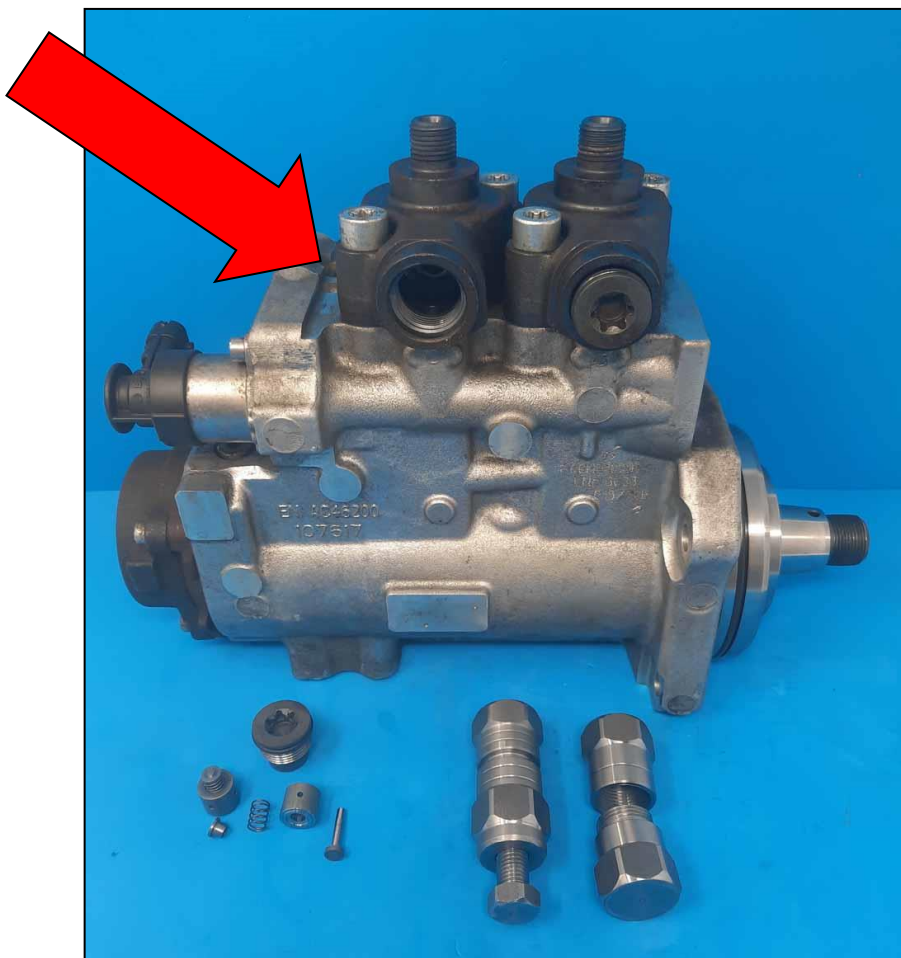

AZ0087-CP5

Kit to clean valve on CPN5 pumps. The kit consists of:

AZ0087-CP5 - 01 - Tool to pull out the valve

AZ0087-CP5 - 02 - Tool to Assemble-Calibrate the valve

PUMP CPN5

AZ0087-CP5

KIT TO CLEAN VALVE ON CPN5 PUMPS

INSTRUCTIONS

1. Insert the valve inside the tool AZ0087-CP5-01- and tighten the screw until the valve is unlocked.



2. Once the valve is unlocked proceed with cleaning. Then assemble the valve again.




PUMP CPN5

AZ0087-CP5

KIT TO CLEAN VALVE ON CPN5 PUMPS

3. Insert the valve inside the tool AZ0087-CP5-02- and tighten the tool until it stops.
When the tool is totally closed, the calibration of the valve is perfect!

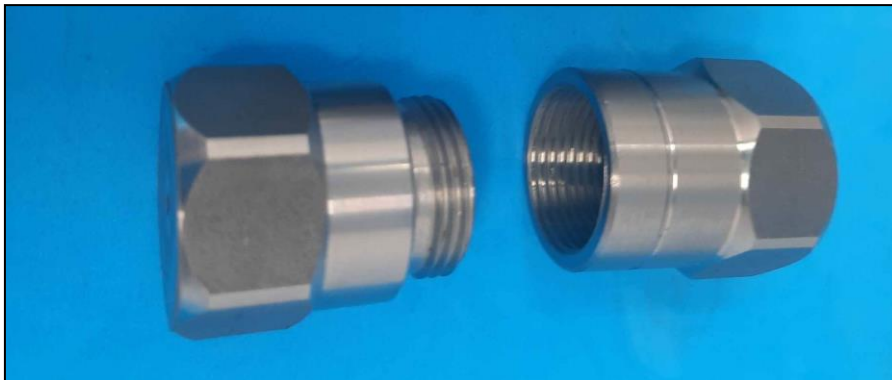

4. Now proceed to assemble the valve on CP5 pump.